

INSTALLATION INSTRUCTIONS for

RDL Lever Lock with Simpli™ Roseless Trim (Patents Pending)


FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 / www.sargentlock.com

Installing an RDL Lock

STEP 1

Insert outside bushing as shown (65 function only)


Tools Required:
Phillips Screwdriver
T20 Torx Wrench
Lever Base Tool (Provided)

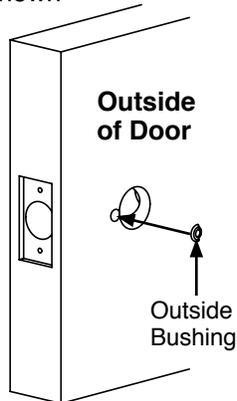

STEP 2

Insert outside mounting plate assembly



- Ensure that the spindle is pre-assembled to the mounting plate assembly
- Orient the bushing to avoid interference as shown (65 function only)

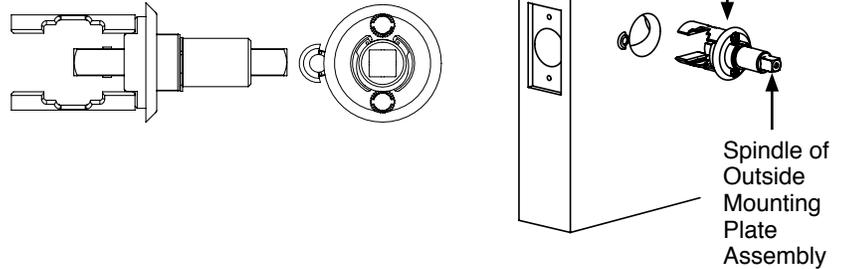

STEP 3


Insert latch assembly

- Position the threaded hole on the latch assembly towards the inside of the door (65 function only)

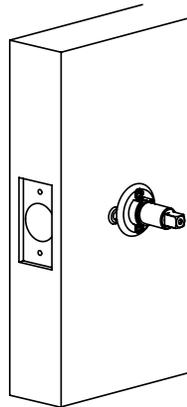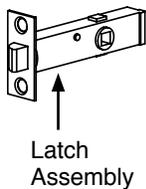

STEP 4


Insert inside bushing as shown (65 function only)

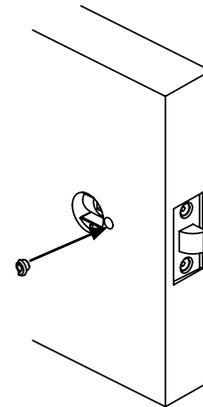

STEP 5


Assemble privacy button to latch assembly (65 function only)

- Thread the privacy button into the threaded hole of the latch assembly through the inside bushing

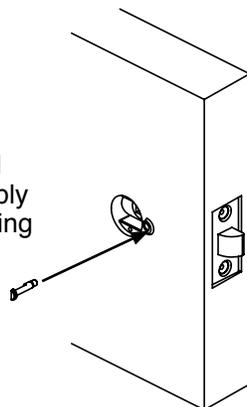

STEP 6


- Verify the spindle is assembled to the mounting plate assembly
- Position and secure inside mounting plate assembly with two #6-32 screws provided (not shown)
- Orient the bushing and privacy pin as shown to avoid interference (65 function only)

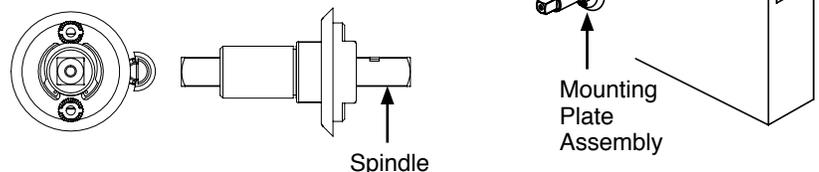

Note: Loosening the pre assembled #6-32 screws on the outside mounting plate may improve alignment for thicker doors.


STEP 7

Rotate and verify the set screw hole in both mounting plate assemblies face the hinge and push both spindles into the latch assembly hubs.

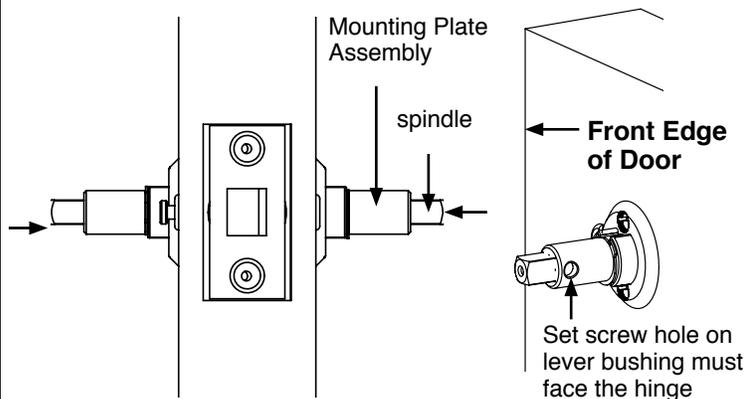

STEP 8


Position the outside front onto the latch assembly and secure with provided screws

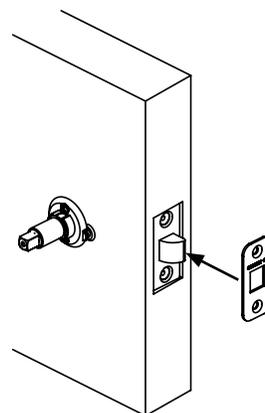

STEP 9

Assemble the inside and outside collars by threading to the mounting plate with provided tool

- Orient the bushing to collar as shown (65 function only)

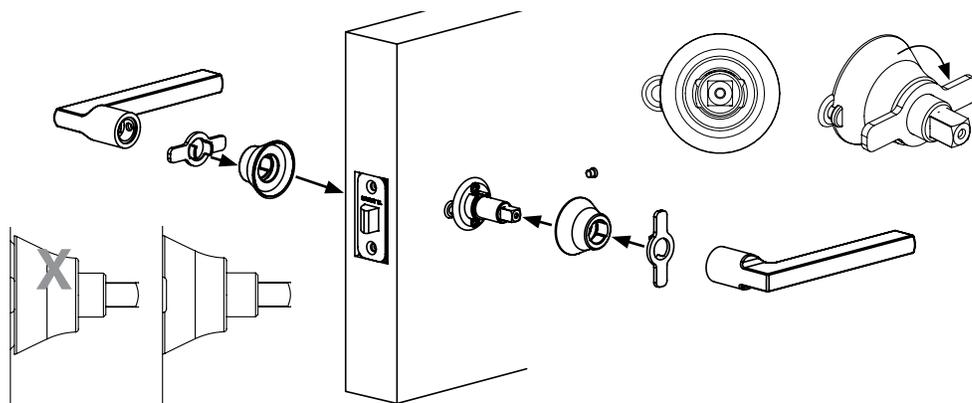


Note: Collars must lie flush against the door

STEP 10


Assemble the inside and outside levers with provided set screw (not shown)

- Test assembly
- Install Strike

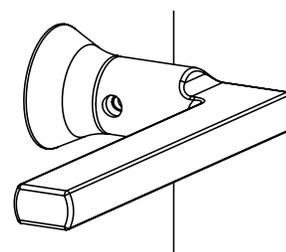


Dummy Trim Assembly Shown

Use assembly steps 2, 6, 9 & 10 for dummy trim installation

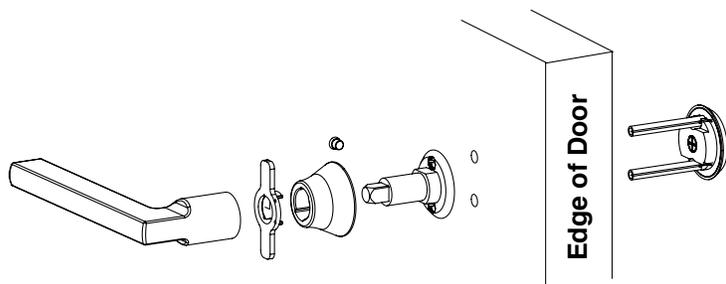

Template for RDLU93 & RDLU94

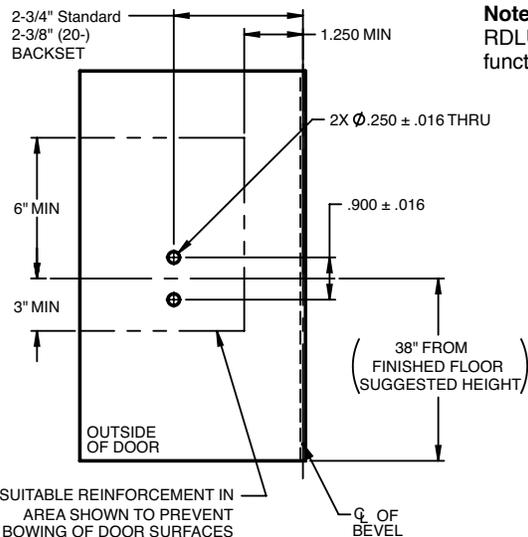

Notes: For use with RDLU93 & RDLU94 functions only.

SUITABLE REINFORCEMENT IN AREA SHOWN TO PREVENT BOWING OF DOOR SURFACES

SARGENT

ASSA ABLOY

ASSA ABLOY, the global leader in door opening solutions

Copyright © 2010, Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.

A8046:B 9-01-10