

## DAYBAR INDUSTRIES LIMITED

## DW350K to DW675K SERIES


INSTALLATION DETAILS AND STUD OPENING DIMENSIONS

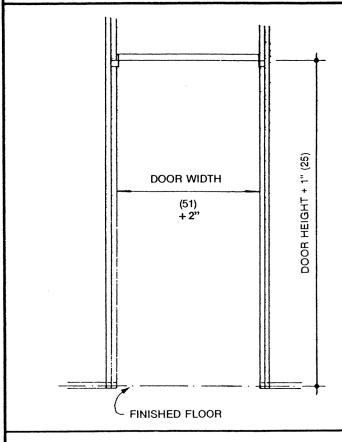


## **INSTALLATION DETAILS**

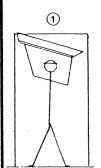


Install header.

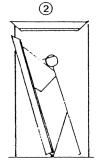


Install hinge jamb. Ensure tabs on jamb are located through slots in header.

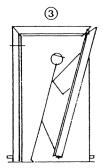


Install strike jamb in same manner as hinge jamb.

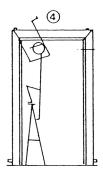

Pull down header and secure by bending over the jamb tabs.

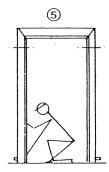

Plumb hinge jamb, adjust tension anchor and secure strap and base anchors to studs.

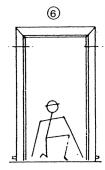

Adjust strike jamb and head size. Square and adjust tension anchor. Secure strap and base anchors to studs.

RH

7//

ORIGINAL DATE OF ISSUE — JULY 1978		
REVISIONS	#	DATE
General	1	Jan. '81
Welding Advice	2	Feb. '84



For Distributor Welding:

LH

Bend Internal Alignment tabs into Centre of Frame.

SWING KEY